
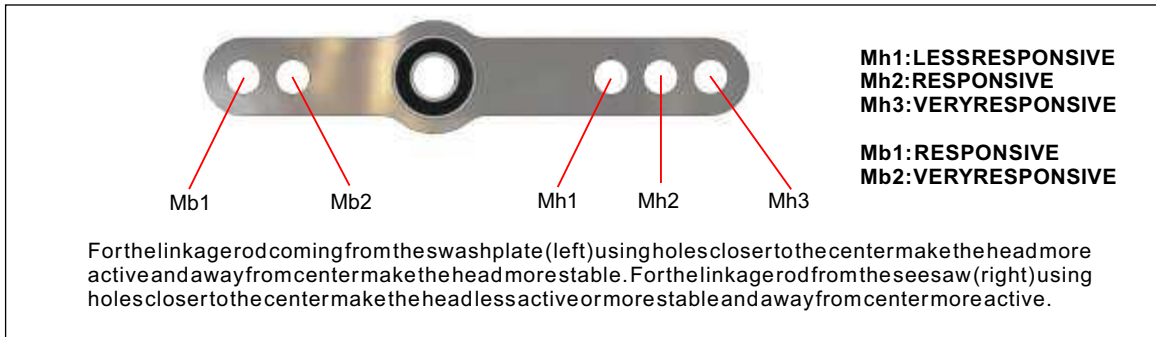
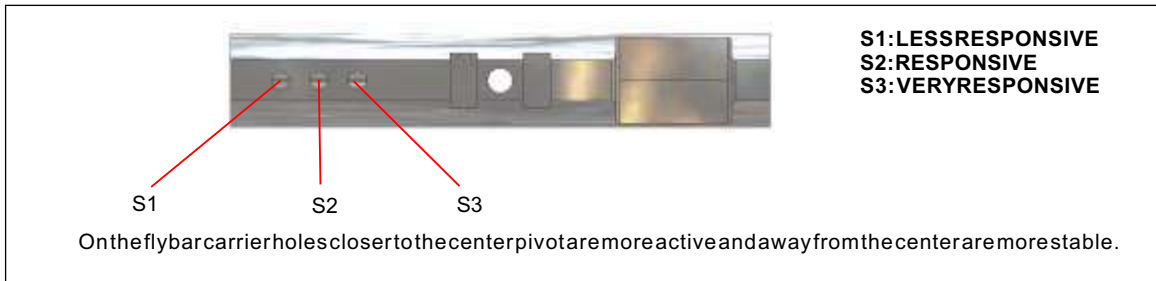


## **STEP4-13 ROTOR HEAD SETUP**

In the diagrams below are explained the different settings possibility of this rotor head. There are many setups with different results. Adjust this settings on demand of you and your capability. Some of the settings can produce binding. Ensure that the ATV settings in the radio and linkage rod adjustments allowing no bindings. This is important to achieve a good performance of the rotor head.

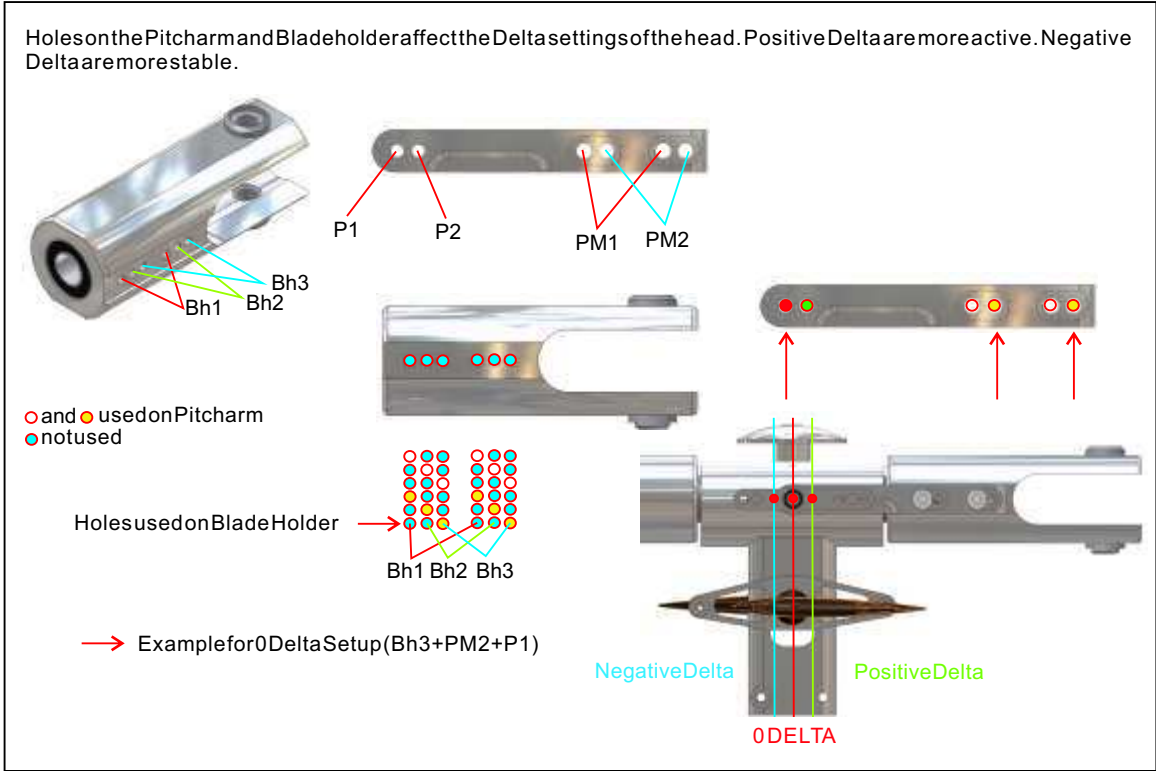

**IMPORTANT:**

When using very responsive settings the forces applied to the CCPM servos are higher than normal. Plastic servo gears can suffer or break. Servos with metal gears are recommended for those settings.